



SKC AirChek Essential Operation

The pump will come pre-calibrated, with tubing connected.

1. On the side of the pump, press the power button. The pump will light up, as shown below:



2. Lift the top protective cover and press the "Pump" button to start your sampling.



To charge the pump, simply plug in the dock and place the pump inside. You will see a small light on the front.



You can plug up to five docking stations together, to create a five-station charger. Simply use the provided power cord (as pictured).



NOTE: These pumps can sample while charging!

Calibration

Before calibration, the pump must run for 10 minutes MINIMUM. Previous run must be cleared prior to calibrating.

1. While the pump is powered on, but not sampling, press and hold the PUMP button until screen shows four dashes to clear the previous run.



2. Pressing up or down on the arrows will enter calibration mode. Adjust the flow accordingly on the calibrator.



NOTE: While in this screen, the calibration will only show on the field calibrator itself.

3. When you have your desired flow, press the "Pump" button to set your flow rate.



To prevent the pump from being stopped by an accidental touch, the buttons can be locked by pressing the power button on the side of the pump, while it is running. The screen lock indicator will display on the screen and the backlight will dim (pictured).



To unlock, press the power button again. The indicator will disappear, and backlighting will be restored.