




### Resealable Assay Tech Badge Sampler

When your badge arrives, each individual badge will be in their own clear plastic bag. Remove from the clear bag and completely tear off the top of the white pouch, to open.

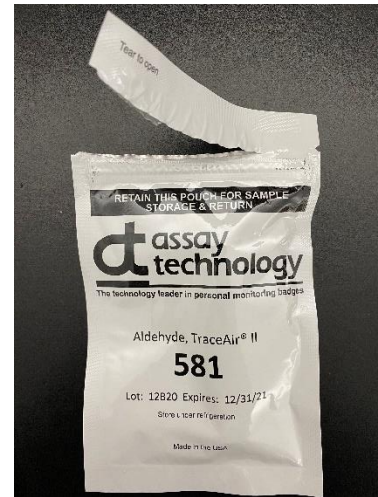

Remove your badge, **DO NOT** throw out the pouch.

Badge type and color of Seal Stick will vary.



Perform your sampling by sliding the badge out of its hard-plastic case (above, left), or by opening the ChemDisk design (above, right). Record on your chain of custody the sampling duration in minutes (or the start/stop time) for each sample. Place badge back in the hard-plastic case, and then in the pouch when sampling is completed.



Take one of the provided labels and adhere it to the outside of each pouch that contains a sampled badge.

Utilizing the pouch that badge was received in, fold over the top. Taking the Seal Stick, feed the protruding nib into the fold. Feed the pouch through the blue portion of the Seal Stick.



If fed correctly, you can pull the Seal Stick over the rest of the pouch.

**Your badge is now ready for shipment. Do not utilize any sort of tape, as that may invalidate your sample.**

